



Instructions For Use

Proper inflation is necessary to use this product and is explained in 6 easy steps!

Inflating the Inner Grid and the Outer Ring

1. Unpack

To Start: Unpack your Solar Sun Ring™ and unfold.

Soften - Allow the Solar Sun Ring™ to lay in the sunshine for 15 to 30 minutes, depending on intensity, to allow the packing lines to soften.



2. Inflate outer ring

Outer Ring: Inflate the outer ring firmly to allow its shape to be formed.

Close the valve.




3. Inflate inner air chamber

Inner Part: Inflate the inner air chamber only slightly.

Close the valve.

PLEASE NOTE: Unlike regular inflatable products Solar Sun Rings™ must not be "full" of air. The inner ring must NOT be inflated too strongly, as this will cause the Solar Sun Ring™ to bulge and it will not lie flat on the water.

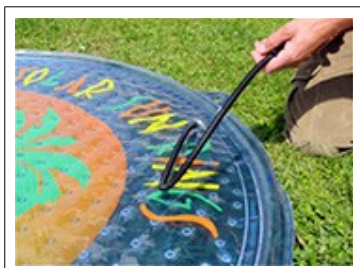

4. Even Distribution

Air in the inner area must be evenly distributed, so that the upper and lower vinyl sheets separate from each other.

This can be done by moving the air with your flat hand to the areas where the vinyl is sticking together.



5. Install rings

Using the Solar Sun Ring™: The Solar Sun Rings™ are now ready for use. Place them onto your pool and allow them to float around.

The magnets in each Solar Sun Ring™ will link with other Solar Sun Ring™ magnets.



6. Problems

A) Solar Sun Ring™ does not lie flat on the water: If the Solar Sun Ring™ does not lie flat it will not work correctly. This is caused by too much air being in the inner air chamber, so you must allow some deflation. Please use the small plastic tube provided to assist you.



B) The ring loses air: The valves are not correctly closed or the Solar Sun Ring™ has been punctured